


## CRUISER II SADDLEBAG

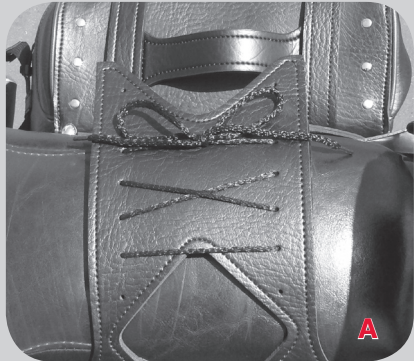

When mounting your new Tour Master saddlebags, it is important that both saddlebags are centered over the motorcycle and do not contact the rear wheel, drive train or exhaust system at any time. Please use the following instructions in conjunction with your motorcycle's factory supplied owners manual to properly install your Tour Master saddlebags.

### I. MOUNTING YOKE ADJUSTMENT:

- Adjust the mounting yoke by first removing the lacing system that secures the two yoke halves.
- Move the two yoke halves inward or outward until the saddlebags ride as high as possible on both sides of the motorcycle. When properly adjusted, both bags will hang parallel to one another.
- Utilizing the lacing pattern shown in both images (A) and (B), reinstall and fasten the lacing system. The lacing must pass through a minimum of four sets of adjustment holes on the mounting yoke.




**⚠ WARNING:** Saddlebags must never contact the rear wheel, drive train or exhaust. A minimum clearance of two inches, with the suspension compressed, is necessary at all times.

**⚠ CAUTION:** Tour Master saddlebags do not fit under the seat of all motorcycles. Please check your motorcycle's factory supplied owners manual for under saddle mounting compatibility and proper seat removal and installation.

### II. MOUNTING STRAP INSTALLATION:

- With the yoke properly adjusted, attach each of the four mounting straps (C) and (D) to a rigid portion of the frame or rear rack assembly.
- Connect the quick-release buckles and pull the adjustment straps tight.
- Secure excess strap tether with the integrated hook and loop fastener (E).

## MOUNTING INSTRUCTIONS

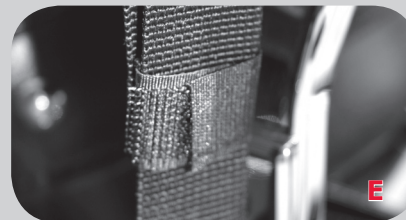


**⚠ WARNING:** Mounting straps must never contact the rear wheel, drive train or exhaust. A minimum clearance of two inches, with the suspension compressed, is necessary at all times.

To remove one or both saddlebags using the quick-release zipper attachment, please use the following instructions:

### I. QUICK-RELEASE ZIPPER REMOVAL:

While holding the carrying handle, unsnap the zipper locking mechanism and unzip the zipper.

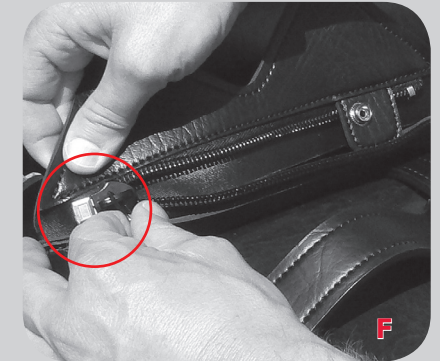

### II. QUICK-RELEASE ZIPPER INSTALLATION:

- Fully insert the male portion of the yoke zipper (F) into female zipper slide attached to the saddlebag.
- Completely zip the zipper and secure the snap locking mechanism.
- Double-check that the saddlebags are centered over the motorcycle and that both the saddlebags and securing straps do not contact the rear wheel, drive train or exhaust system.

**⚠ WARNING:** The saddlebag yoke's male zipper starter must be fully inserted into the zipper slider on the saddlebag. Failure to do so will cause the zipper to disconnect and the saddlebag to detach from the mounting yoke.

**⚠ NOTICE:** Each saddlebag has a maximum weight capacity of 10 pounds.

**tourmaster**®