

MOUNTING INSTRUCTIONS ●



The Cortech® Sport Tail Bag and Saddlebags (TriBag System) can be used together as shown above (A), or separately. They can be mounted on the passenger portion of a long saddle, on the rear fender or on a rear motorcycle rack.

The Tail Bag can be expanded in size by simply undoing two zippers (B). When using the Tail Bag by itself:

1. Find the bungee cords in their pockets underneath the bag and attach them to two points on either side of the motorcycle.
2. Make sure the bungees are stretched tight enough to keep the bag secure. If necessary, shorten the cords by re-tying the knots on each end.


The Cortech® Sport Saddlebags incorporate protective neoprene pads under the top bridge straps and on either side where the bags touch the bike.



1. Adjust the top bridge straps for the proper length so the bags ride as high as possible and don't touch the hot exhaust pipes (a minimum of 2" with suspension compressed), interfere with the drive chain or touch the wheel. Place the bags over the bike (C).
2. There are four individual straps with male quick release buckles on one end and a loop on the other. They snap into their female counterparts at the front and rear of each bag.
3. Place the straps over some structural part of the bike, put the buckle end through the loop (D) and pull tight on the buckle (E). Snap into the female ends on each bag (front and rear) and pull tight (F).

These frame straps can be left on the bike and used as a quick release mounting system.

● MOUNTING INSTRUCTIONS

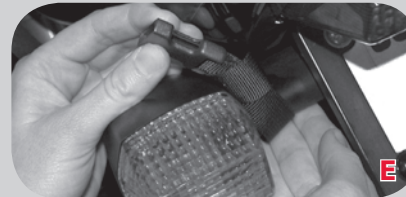

Do not ride with these straps left on the bike without the bags.

When using the Tail Bag with the Saddlebags:

1. Tuck the bungee cords back into their hiding pockets, unfasten the bottom flap on the Tail Bag and slide it under the two bridge straps that connect the Saddlebags.
2. Refasten the flap and connect the quick release male buckle ends on the Tail Bag into the front and rear female counterparts on each Saddlebag. Reverse the process to remove the bags.



It is important that the bags are centered over the motorcycle. Balance the load with the heaviest items in the bottom of the Tail Bag or, if using all the bags, keep the heaviest items in the Saddlebags. Always keep the center of gravity as low as possible.

Each bag has a weight capacity of no more than 15 pounds.

In the event of rain, there are individual rain covers included for each bag.

A little soap and water can keep these handsome Cortech® bags looking good for a long, long time.

Cortech
tourmaster®